

CROSSBOW EXTREME™

EnRoute Beeper

Piezo Beeper

Installation Instructions



Red Wire - Connect to 12V Power

Black Wire - Connect to Yellow wire on I/O Cable (Pin 4

Mount the Piezo Buzzer Unit in a secure location and you can begin to utilise this feature

How to Activate / Deactivate Feature

1. Select Device 2. Open Device Toolbar 3. Select "Send Tab"



4. Click on drop down menu arrow to view options

5. Select "Enable Beeper" or "Disable Beeper"

6. Click "Send Now"

The screenshot shows a software interface with a 'Devices' list on the left and a 'Device Toolbar' on the right. The 'Device Toolbar' has tabs for 'Send', 'Manage', and 'Reports'. The 'Send' tab is active, showing an 'Over-the-air Message' section with a dropdown menu for 'Enable Beeper'. Below this is a 'Map the Results' checkbox and a 'Send Now' button. Red arrows point from the numbered instructions to the corresponding UI elements.

When the EnRoute Beeper state is "enabled / on", and when the EnRoute State is entered, the EnRoute Beeper Output will pulse at 1 Hz for 30 seconds. And if the vehicle is idle with the ignition state on for more that 5 minutes the Beeper will sound.